

PFF5-1901G

DESCRIPTION

FRONT RADIUS ARM TO CHASSIS CASTER **ADJUSTABLE BUSH**

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes

1 x PTFE/Silicone Grease

2 x Stainless Steel Sleeves

4 x Mild Steel Outer Shells

2 x Zinc Plated Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- -all work to be carried out by a licensed technician;
- -all safety precautions adhered to;
- -wheel alignment to be checked and adjusted as required after any suspension work.
- -All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

- 1. Remove the arm from the vehicle and press out the original bush including outer shell.
- 2. Clean any dirt and corrosion from the bore of the arm, removing any sharp edges or burrs around the bore with a rounded file.
- 3. Press the plated steel outer shells into each side of the arm, until sitting flush to the face of the arm.
- 4. Apply some washing up liquid to the bore of the shells and press the polyurethane bush in until fully through the arm.

Tip: If you are having trouble pressing the bush in, try pressing the bush in at a slight angle so that one part of the lip is already in the bore of the shell, and when steady pressure is applied, the rest of the lip should follow.

- 5. Apply some of the supplied grease to the bore and the mounting faces of each bush.
- 6. Add the supplied washer to the stainless steel sleeve and insert the sleeve into the bush. The washer will sit between the sleeve head and bush face.
- 7. For maximum camber use a 26mm spanner to rotate the sleeve so that the bore is positioned as shown in figure 2.
- 8. Refit the arm and tension all hardware to manufacturers recommended torque settings.

