

POWERFLEX®

PART NUMBER

PFR5-6032

DESCRIPTION

REAR DIFF MOUNT FRONT MOUNTING BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 1 x PTFE/Silicone Grease
2 x Stainless Steel Washers 2 x Stainless Steel Sleeves
2 x Zinc Plated Mild Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



FRONT OF CAR

1. Remove the original bush and clean away any dirt and corrosion, remembering to also file away any sharp edges.

2. Insert the Polyurethane Bush into the bore of the subframe, ensuring the tophat of the bush is facing the rear of the car, and that the bush sits flush within the bore.

3. Apply some of the supplied grease to the outer surface of the Stainless Steel Sleeve, and insert it into the bore of the Polyurethane Bush, ensuring it sits flush.

4. Insert the Stainless Steel Washer into the recess of the Polyurethane Bush, with the filleted edge going in first, until it sits flush within the recess.

5. Place the Zinc Plated Mild Steel Washer on the other end face of the Polyurethane Bush and refit the subframe, remembering to tension all hardware to manufacturers recommended torque settings.

Zinc Plated Mild Steel Washer

Subframe

Polyurethane Bush

Stainless Steel Sleeve

Stainless Steel Washer



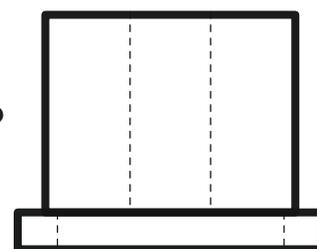


Figure 1