

POWERFLEX®

PART NUMBER

PFR85-610

DESCRIPTION

REAR BEAM MOUNTING BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane PFR85-610 Bushes
- 2 x Stainless Steel Sleeves
- 1 x PTFE Grease Sachet

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove the original bush and clean away any dirt and corrosion, using a rounded file to remove sharp edges from the vacant hole.
2. Insert the PFR85-610 Bush into the vacant hole, paying attention to the orientation shown in Figure one, with the top hat facing the outside of the car. Insert bush until it sits flush in the hole.
3. Apply some of the supplied grease to the bore of the Polyurethane Bush and insert the Stainless Steel Sleeve until it sits flush within the bore.
3. Refit to the rest of the car and test drive.

← **OUTSIDE OF CAR**

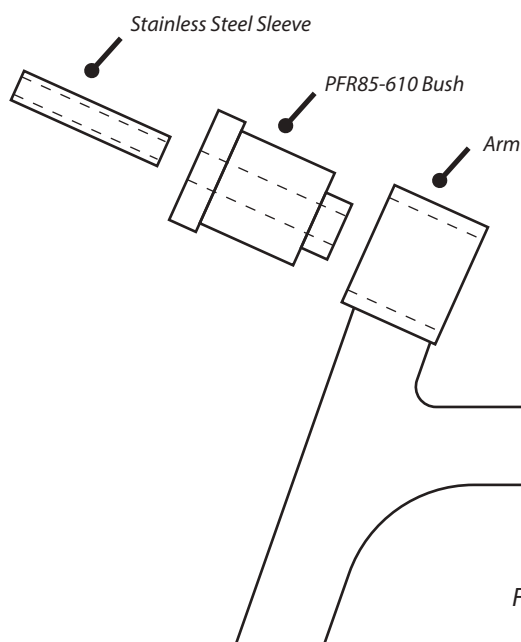


Figure 1