



PART NUMBER

PFF85-802GBLK

DESCRIPTION

FRONT ARM REAR BUSH CASTER ADJUST

INSTALLATION GUIDE

Product description:

This part replaces OEM part number 5Q0407183E.

This part allows on car adjustment of caster +/- 0,33 degrees.

Contents (parts per pack):

2 x Caster adjustable bush unit

Please read the complete fitting instructions and check package components before fitment.

These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

-all work to be carried out by a licensed technician;

-all safety precautions adhered to;

-wheel alignment to be checked and adjusted as required after any suspension work.

All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the front lower arm from the car. Push out the rubber bush from the arm.

2. Remove any sharp edges and clean any dirt or corrosion from the arm bore.

3. Press the new bush unit into the arm, with the larger diameter facing towards the upper face of the arm. Fig A.

WARNING: Do not press on the centre sleeve/ball, press on the outer shell only otherwise you may damage the bush.

4. Adjust bush to locate the offset sleeve bore towards the inside of the arm. Fig B. Fit back arm to the car.

Tip: For maximum performance, adjust for maximum caster by rotating the centre ball so that the offset centre sleeve is nearer to the inside of the car.

5. Tension all hardware to manufacturers recommended torque settings.

Larger diameter towards the upper face of the arm.

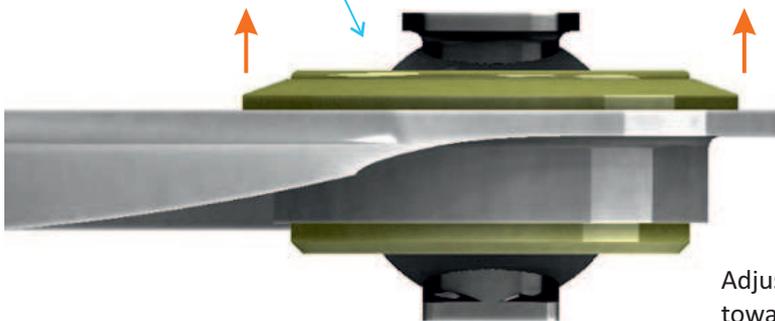


Fig A.

Adjust bore towards the inside of arm.

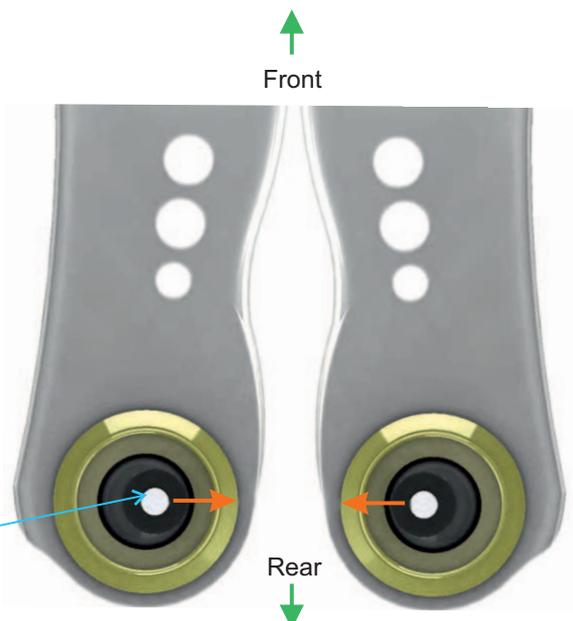


Fig B.