

# VOLKSWAGEN

## T3 - TRANSPORTER, BUS, CARAVELLE, KOMBI

1980-1992

<b>1</b>	<b>Front Lower TCA Inner Bush</b>		
	PFF85-1001	2 per car	£16.45 ea

<b>2</b>	<b>Anti roll Bar Mount Bush</b>		
	PFF85-1002	4 per car	£7.65 ea


<b>3</b>	<b>Front Steering Rack Mount Bush</b>		
	PFF85-1003	4 per car	£7.65 ea

<b>4</b>	<b>Front Anti Roll Bar Bush</b>		
	PFF85-1004-19	2 per car / 19mm	£10.95 ea
	PFF85-1004-21	2 per car / 21mm	£10.95 ea
	PFF85-1005-21	2 per car / 21mm	£10.95 ea

<b>KITS</b>	

<b>NOTES</b>	
	Check antiroll bar
	PFF85-1005-21 is for earlier vehicles (1980-1985)

Prices shown are GB Pounds plus VAT  
All parts are priced individually and should be ordered in the quantity listed as "per car"

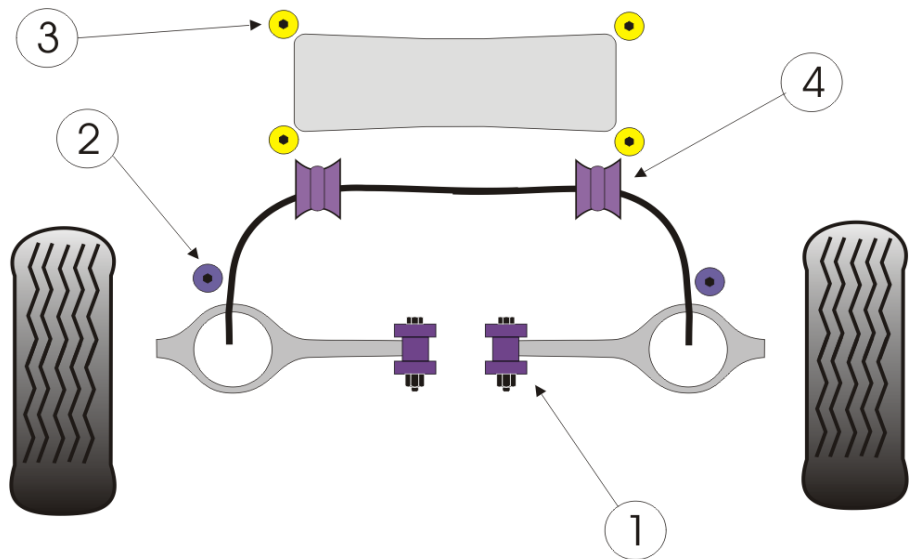

VW Transporter, Bus,  
Caravelle, Kombi

