

# POWERFLEX®

## PART NUMBER

# PFF19-1226

## DESCRIPTION

## GEARBOX MOUNT INSERT

## INSTALLATION GUIDE

### Contents (parts per pack):

1 x Polyurethane Bush      1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. To access the gearbox mount, the battery box will have to be removed as the mount is located underneath the battery box.
2. Access the gearbox mount and remove the top bracket plate (Figure 1) and clean any dirt and corrosion off the mount.
3. Place the polyurethane part on the mount so that the features of the mount match those on the polyurethane part.
4. Re-fit the top bracket plate back onto the gearbox mount and fit the battery box back onto the car. Tension all hardware to manufacturers recommended torque settings.

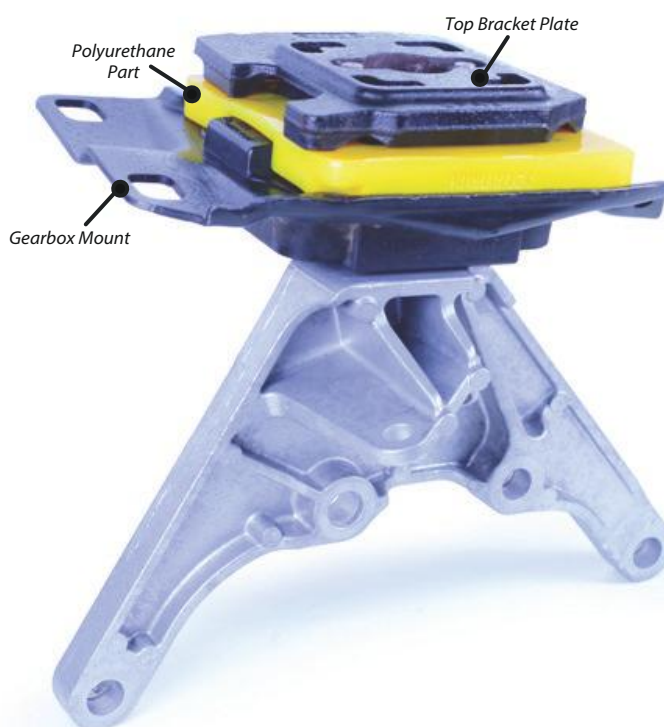


Figure 1 - fitted image of the polyurethane part inside the gearbox mount