



PART NUMBER

PFF27-302

DESCRIPTION

FRONT UPPER WISHBONE BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- | | |
|-----------------------------|--------------------------------|
| 4 x Polyurethane Bushes | 4 x Large Plated Steel Washers |
| 4 x Stainless Steel Sleeves | (2 x 16mm bore, 2x 12mm bore) |
| 1 x PTFE/Silicone Grease | 4 x Small Plated Steel Washers |

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original bushes from the lower wishbone including the original outer sleeve.
Note: These parts can be pressed put or burnt out of the rubber and cut the the original outer sleeve.
2. Clean any dirt and corrosion from the bore of the wishbone, and file off any sharp edges with a rounded file.
3. Press the top hat bush into the bore of the wishbone. Apply some of the supplied grease to the bore of the bush and insert the stainless steel sleeve into the bore of the bush.
4. Position the smaller diameter washer towards the inside of the wishbone and the larger diameter washer is placed towards the outside of the wishbone as shown in Figure 2.
5. Tension all hardware to manufacturers recommended torque settings.

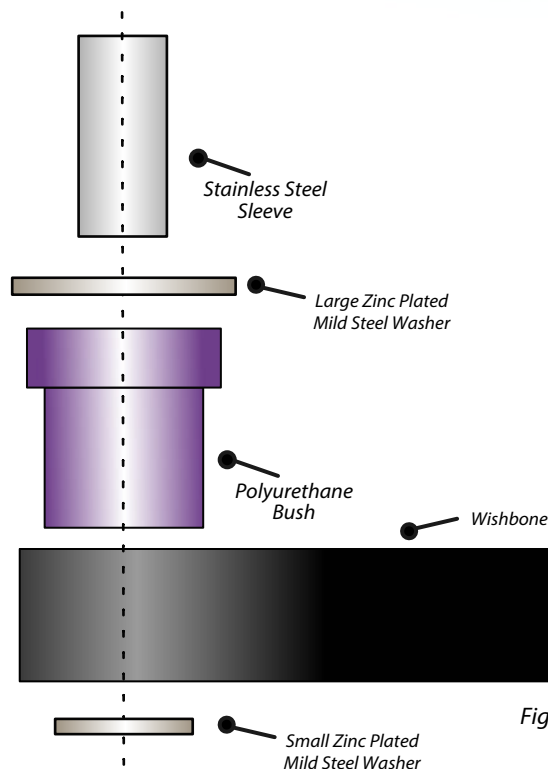


Figure 1



Figure 2