

POWERFLEX®

PART NUMBER

PFF57-102

DESCRIPTION

FRONT WISHBONE FRONT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane Bushes
- 2 x Stainless Steel Sleeves
- 1 x PTFE/Silicone Grease
- 2 x Stainless Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original rubber bush and its outer shell from the front wishbone. A hydraulic press may be required to safely extract the bush.

2. Thoroughly clean the bore of the wishbone to remove any dirt, debris, or corrosion. Inspect the bore and carefully remove any sharp edges or burrs using a rounded file.

3. Insert the polyurethane bush into the wishbone from the upward direction, ensuring it is positioned as illustrated in Figure 1. Press the bush fully into place.

4. Apply a suitable amount of the supplied grease to the bore of the polyurethane bush. Insert the metal sleeve into the lubricated bore, ensuring the hex face remains exposed on the smaller-diameter side of the bush.

5. Position the washer against the larger-diameter face of the bush. Ensure the washer is correctly aligned with the bore of the sleeve.

6. Reassemble the suspension components as required and tighten all hardware to the vehicle manufacturer's specified torque settings.

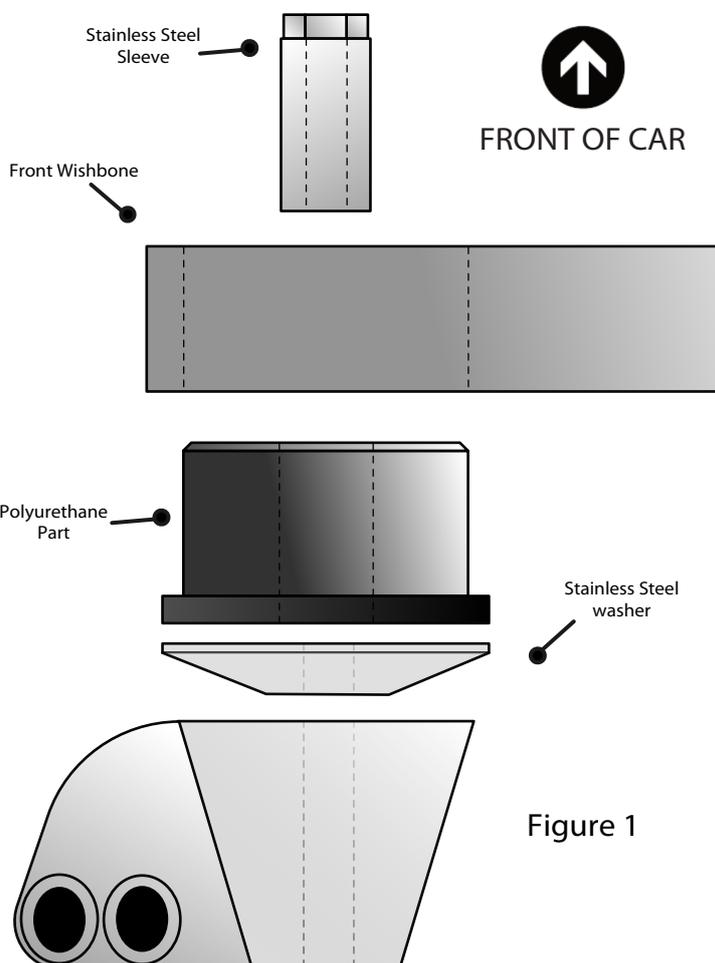


Figure 1