

POWERFLEX®

PART NUMBER

PFF85-201G

DESCRIPTION

FRONT WISHBONE FRONT BUSH CAMBER ADJUSTABLE

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane A Bushes
- 1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes
- 2 x Stainless Steel Sleeves
- 1 x Zinc Plated Steel Spanner

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove original bush from arm.
2. Clean any dirt and corrosion from bore in arm.
3. Fit the polyurethane A bush into bore with the top facing towards the back of the vehicle.
4. Fit the polyurethane B bush into bore with the top facing towards the front of the vehicle.
5. Apply some of the provided grease to bore and mounting faces of each bush. Fit the stainless steel sleeve into bush with machined sleeve face facing forwards on vehicle (flush against polyurethane B bush) as shown in Figure 1.
6. For maximum camber use supplied spanner to rotate sleeve so that the bore is closest to centre of vehicle, as shown in Figure 2.
7. Refit arm and tension all hardware to manufacturers recommended torque settings.

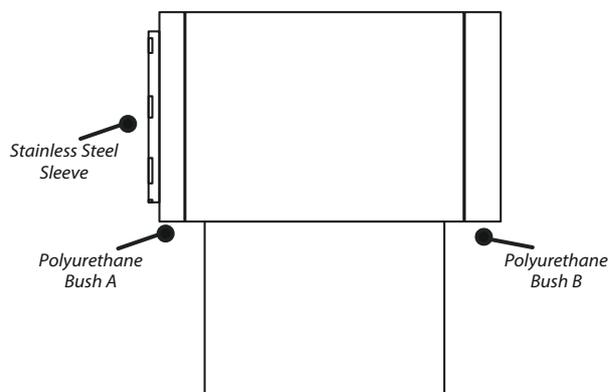


Figure 1

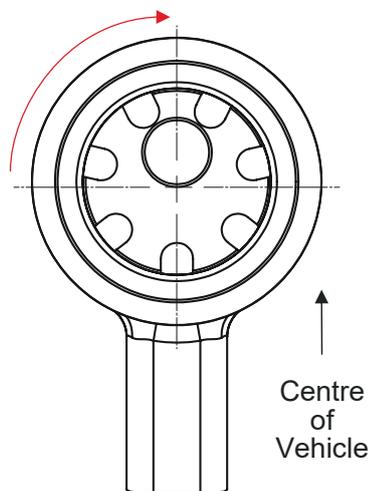


Figure 2