

**PART NUMBER****PFF30-302****DESCRIPTION****FRONT WISHBONE BUSH****INSTALLATION GUIDE****Contents (parts per pack):**

4 x Polyurethane Bushes 1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the front anti-roll bar from the vehicle.
2. The original rubber bush is contained in a metal bracket that is riveted together. Secure the bar firmly on a vice and slowly drill away the swaged section (rivet) from the bottom of the brackets.

Note: DO NOT drill into the brackets more than required. See Fig A.

3. Separate the brackets from the bush and the anti-roll bar.

Note: The original bush may need to be burned out to remove the rubber bonded to the bracket.

4. Remove the rubber bushes. Clean any dirt and corrosion from the brackets and the anti-roll bar.
5. Apply some of the supplied grease to the bore and end faces of each bush and fit the new polyurethane bushes on the bar. Re-fit the brackets on the bushes. See Fig B.
6. Secure the anti-roll bar to the car. Tension all hardware to manufacturers recommended torque settings.

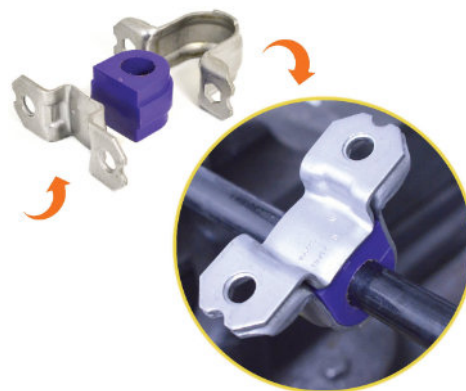
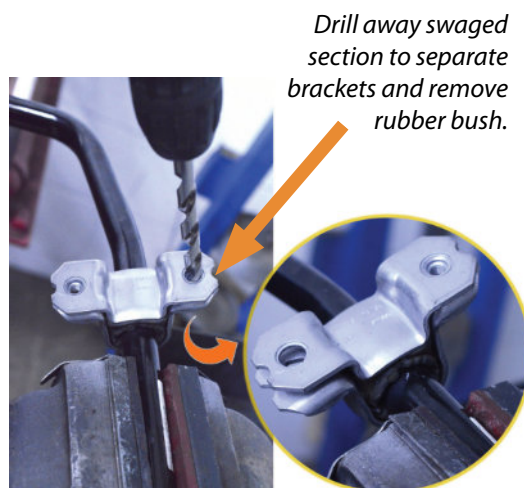


Figure A (Top) & Figure B (Bottom):
*Both figures are illustrative and are not photos of the Lancia bracket or bush.
Use as reference only.*