

**PART NUMBER****PFF2-101****DESCRIPTION****FRONT LOWER WISHBONE FRONT BUSH****INSTALLATION GUIDE****Contents (parts per pack):**

4 x Polyurethane Bushes 1 x PTFE/Silicone Grease

4 x Anodised Aluminium Sleeve-Halves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

**Fitting Instructions:**

1. Remove the front lower wishbone from the vehicle.
2. Carefully remove the OE rubber bush, including its thin outer shells which are in two halves, and pressed in from either side of the wishbone.
3. Clean the bore of the wishbone, removing any burrs or sharp edges with a rounded file.
4. Push the polyurethane bushes into either side of the wishbone.
5. Apply the supplied grease to the knurled bore and outside faces of the bushes, and to the body and inner flange faces of the sleeves.
6. Press the anodised sleeve-halves into each of the bushes, until flush.
7. Refit the wishbone to the vehicle, tightening all hardware to the manufacturers recommended torque settings.

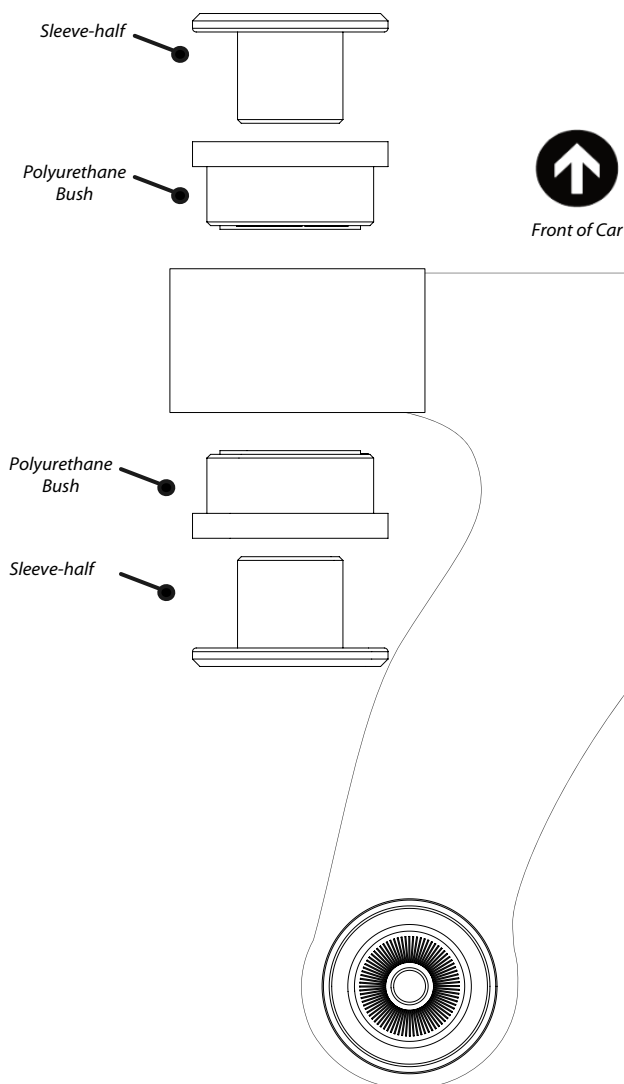


Figure 1