

POWERFLEX®

PART NUMBER

PFF2-102

DESCRIPTION

FRONT LOWER WISHBONE REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 1 x PTFE/Silicone Grease

4 x Anodised Aluminium Sleeve-Halves

2 x Anodised Aluminium Outer Shells

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Remove front lower wishbone from vehicle.
2. Carefully remove OEM bush from the rear position of the wishbone. Delicate use of a workshop press is recommended, and ensure the arm is well supported around its circumference.
3. Clean bore of wishbone and remove any burrs or sharp edges.
4. Press the black anodised outer shells bushes into place in the wishbone bores from the top of the arm, until the top of the shell sits flush with the top of the arm. (Figure 1)
5. Push the Polyurethane bushes into place in the shells (Figure 1). The use of washing-up liquid as a lubricant is recommended.
6. Apply the supplied grease liberally into the knurled bore and outside faces of the bushes and the outside of the sleeve-halves.
7. Push a sleeve-half into each end of the bush, until sitting flush.
8. Refit the arm to the car, ensuring to tighten all hardware to manufacturers recommended torque settings.

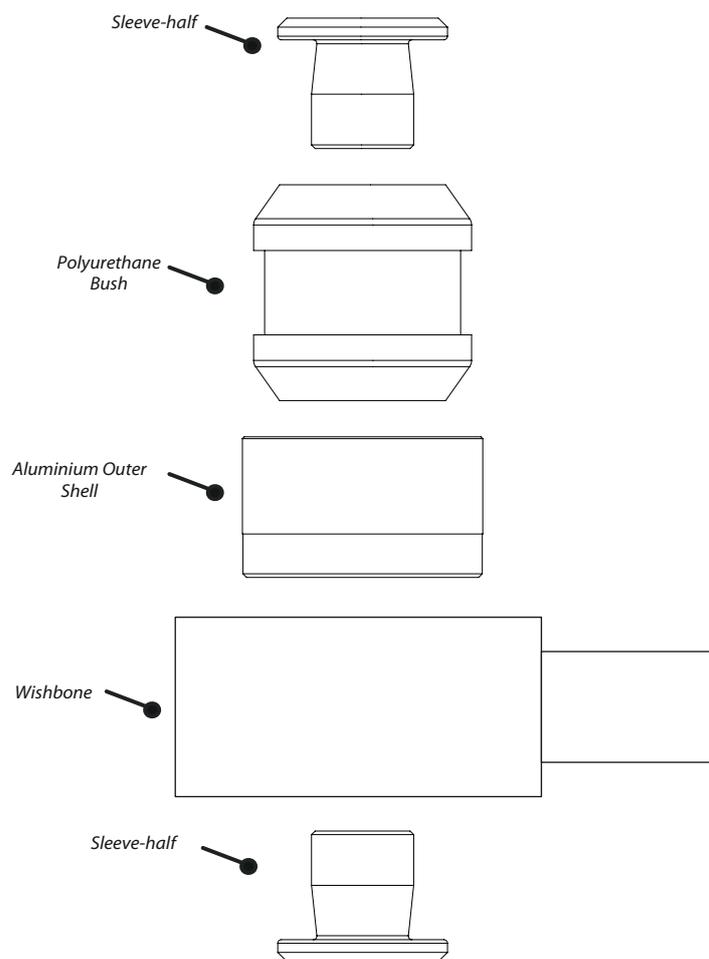


Figure 1