

POWERFLEX®

PART NUMBER

PFR57-717

DESCRIPTION

REAR TRACK CONTROL ARM OUTER BUSH

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bushes 4 x Stainless Steel Sleeves
4x Large Mild Steel Washers 2x Small Mild Steel Washers
1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove the original rubber bushes from the arm.
2. Clean any dirt and corrosion from the bore of the arm, and file off any sharp edges with a rounded file.
3. Press the two polyurethane bushes into the arm, ensuring that the flanges are positioned on the outside of the arm, as shown in Fig 1.
4. Apply some of the supplied grease to the bore and end faces of the bushes where the washers will be positioned.
5. Insert the stainless-steel sleeve into the bore of the bushes until flush.
6. Position the larger washers on the outer face of both bushes, and the smaller washers on the inner face of the rear bush, as shown in Fig 1.
7. Refit the arm to the vehicle and tension all hardware to the manufacturer's recommended torque settings.

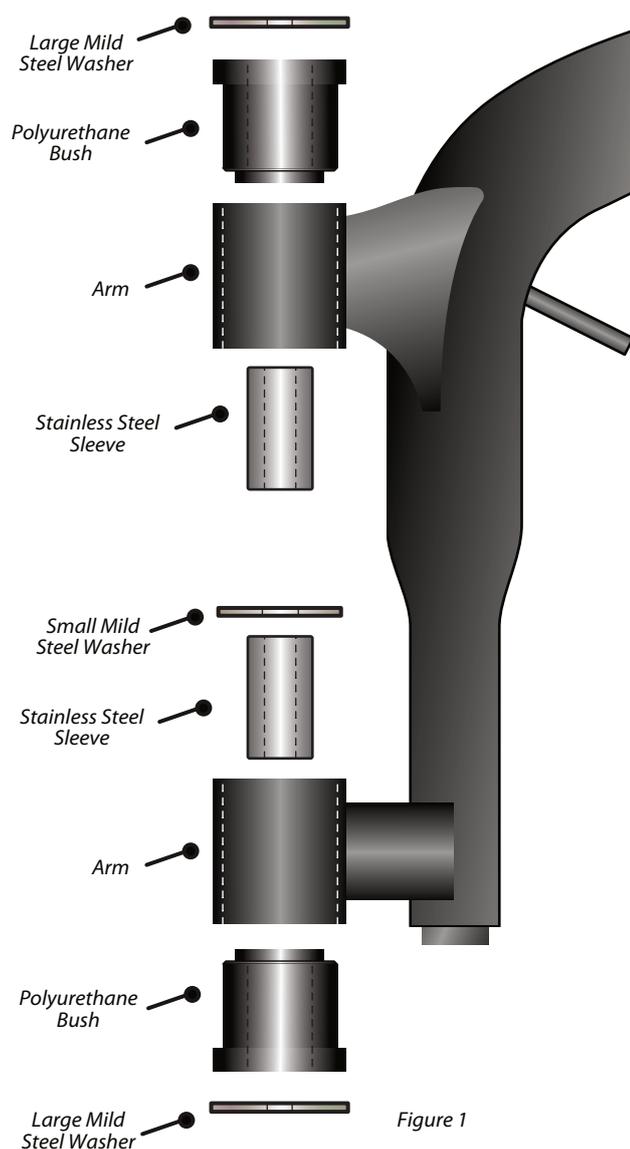


Figure 1