

**PART NUMBER****PFR88-609****DESCRIPTION****REAR TRACK BAR OUTER BUSH****INSTALLATION GUIDE****Contents (parts per pack):**

4 x Polyurethane Bushes 2 x Plated Mild Steel Outer Sleeve
2 x Stainless Steel Sleeves 1 x PTFE/Silicone Grease

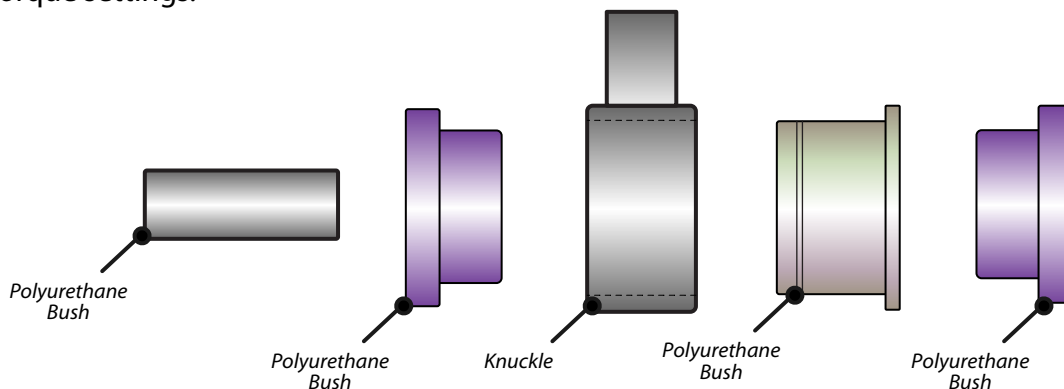
Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- All work to be carried out by a licensed technician;
- All safety precautions adhered to;
- Wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

**Fitting Instructions:**

1. Remove the original rubber bush and clean any dirt or corrosion from the bore of the knuckle.
2. Press the plated shell into the bore from the outside of the rear knuckle (figure A), with the tapered side of the sleeve leading in.
3. Insert two polyurethane bushes into bore of the shell from both sides (figure B).
4. Apply the supplied grease into bore and around the top faces of the bush.
5. Fit the stainless steel sleeve into the bore of the bush.
6. Tension all hardware to manufacturers recommended torque settings.

**Fig A****Fig B**