



PART NUMBER

PFF19-702 / PFF19-902

DESCRIPTION

FRONT WISHBONE FRONT AND REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- | | |
|------------------------------------|------------------------------|
| 2 x Spherical Bearing Bushes | 4 x Rubber Dust Covers |
| 4 x Stainless Steel Insert Sleeves | 1 x Sachet of Bearing Grease |

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:


- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:


1. Remove the original rubber bush from the wishbone, including its outer shell.
2. Clean any dirt and corrosion from the bore of the wishbone, and file off any sharp edges with a rounded file.
3. Press the bearing bush assembly into the wishbone, with the chamfered leading edge first.

Note: To avoid unsettling the circlip and potentially damaging the bush, please ensure that you press on the outer shell.


4. Apply some of the supplied grease to the insides of the rubber dust covers and place on the bush assembly.
5. Insert the stainless steel sleeve into the bore of the bearing, pushing through the dust cover as shown in Fig 1. Repeat the same on the other side (Fig 2).
6. Refit the wishbone to the vehicle and tension all hardware to the manufacturers recommended torque settings.

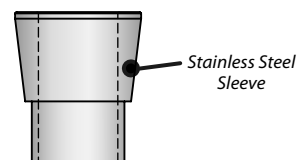


Stainless Steel Sleeve

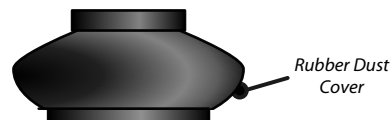

Rubber Dust Cover

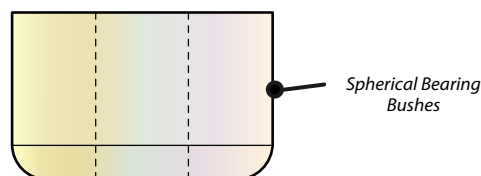


Spherical Bearing Bushes

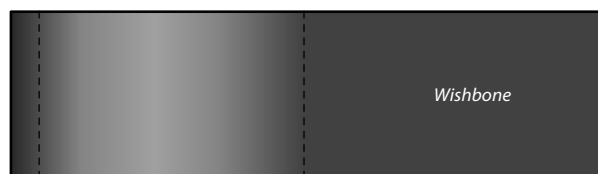

Wishbone



Rubber Dust Cover

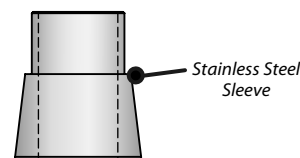

Stainless Steel Sleeve

Figure 1



Figure 2 - Rubber dust cover and sleeve on both sides of the bush