



PART NUMBER
PFR5-306

DESCRIPTION
REAR TRAILING ARM BUSH

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane A Bushes 1 x PTFE/Silicone Grease
4 x Stainless Steel Sleeves 4 x Polyurethane B Bushes

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove original rubber bushes from rear trailing arm.
2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
3. Push the polyurethane bushes into the bore of the arm, with part A, with the bigger lip, towards the outside of the car of the car (Figure 1).
4. Apply some of the supplied grease into the bore of the polyurethane bush for ease of fitting.
5. Press the stainless steel sleeve into the bore of the polyurethane bush so that it sits flush.
6. Refit the arm back to the vehicle and tension all hardware to manufacturers recommended torque settings.

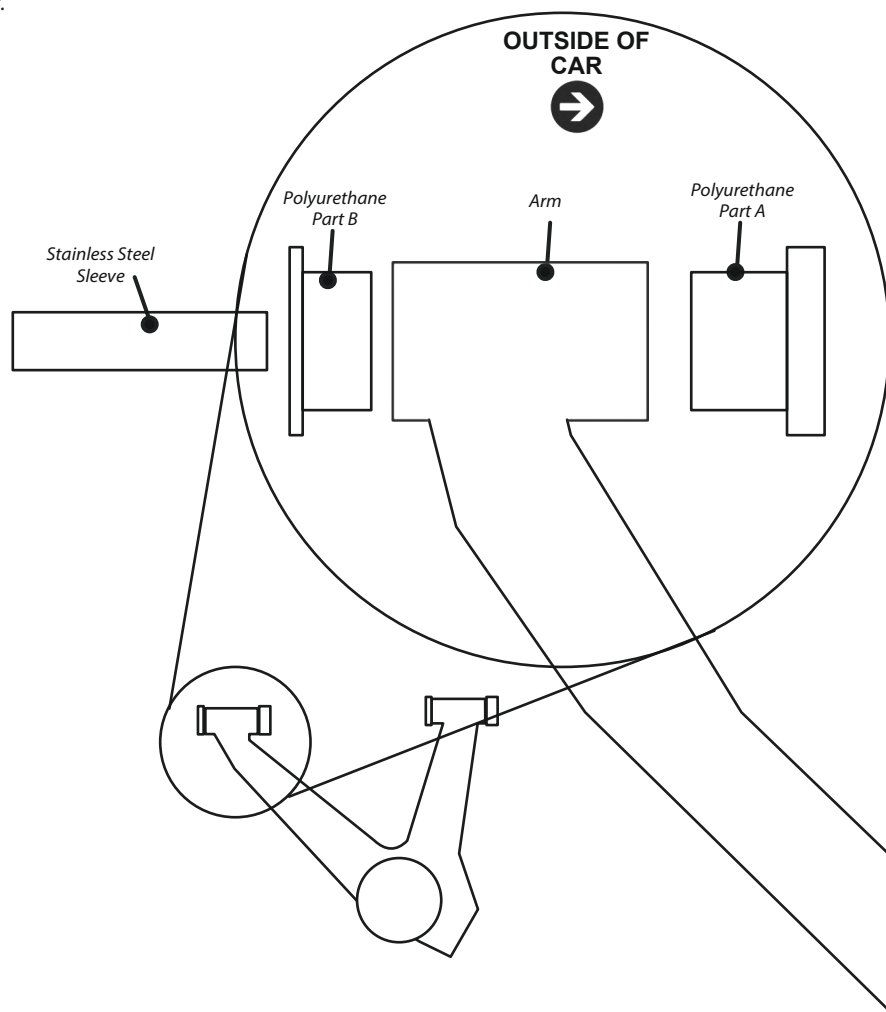


Figure 1 - diagram showing how the polyurethane bushes fit in the rear trailing arm