



PART NUMBER

PFF5-5601G

DESCRIPTION

FRONT WISHBONE REAR BUSH - CASTER ADJUST

INSTALLATION GUIDE

Product description:

PFF5-5601G offers additional +0.5° of caster over PFF5-5601 and is a high performance option to PFF5-4601, and aimed at offering greater precision with improved geometry for people wanting the very best from their E46 or Z4.

Contents (parts per pack):

- 2 x Aluminium outer shells
- 2 x Polyurethane inner bushes
- 1 x Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.


It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.

All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove original bracket from the car and remove the original rubber bush from the bracket, clean any dirt and corrosion from its bore.
2. Press the aluminium outer shell into the bracket from the rear of the car, taking note of correct orientation with the alignment feature on the bracket. This ensures maximum caster adjustment.
3. Apply some of the supplied grease to the bore of the bracket and onto the inner bush. Fit the inner bush onto the hex of the wishbone, fitting the largest diameter of the bush onto the hex of the arm first. It may be necessary in some cases to remove excess flashing and sharp edges from the arms casting using a file.
4. Position the bracket and outer shell assembly onto the inner bush and re-fit the bracket to the car. Tension all hardware to manufacturers recommended torque settings.

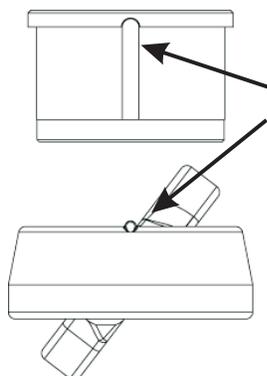

Align feature on shell with feature on shell for correct caster adjustment.
Press shell into bracket until flush with bracket.

