

# POWERFLEX®

PART NUMBER

## PFF57-102

DESCRIPTION

### FRONT WISHBONE FRONT BUSH

#### INSTALLATION GUIDE

#### Contents (parts per pack):

- 2 x Polyurethane Bushes
- 2 x Stainless Steel Sleeves
- 1 x PTFE/Silicone Grease
- 2 x Stainless Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

#### Fitting Instructions:

1. Remove the original rubber bush and outer shell from the front wishbone arm.
2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
3. Push the polyurethane part into the bore of the arm in the upwards direction, as shown in figure 1.
4. Apply some of the supplied grease to the bore of the polyurethane part and push the sleeve in, leaving the hex face exposed on smaller diameter of bush.
5. Place washer against larger diameter face of bush with bore of the washer lined up with the bore of the sleeve. Then tension all hardware to manufacturers recommended torque settings.

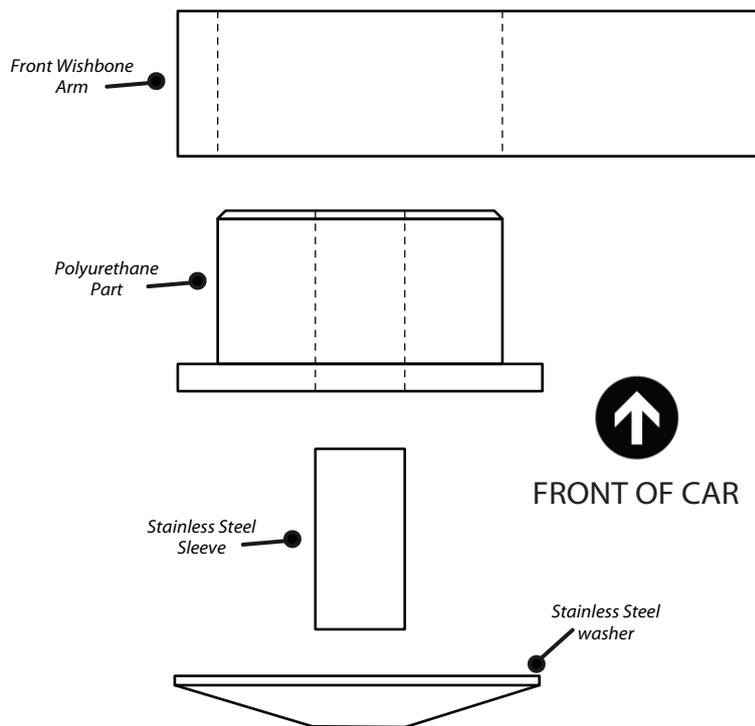


Figure 1