

POWERFLEX®

PART NUMBER

PFF5-701

DESCRIPTION

FRONT RADIUS ARM TO CHASSIS BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- | | |
|-------------------------|-----------------------------|
| 2 x Polyurethane Bushes | 1 x PTFE/Silicone Grease |
| 4 x Mild Steel Washers | 2 x Stainless Steel Sleeves |

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove front lower arm from the car.
2. Remove the original bush from the arm and clean any dirt or burrs from the bore in the arm.
3. Apply some washing up liquid to the bore of the arm and press the polyurethane bush in until fully through the arm.

Tip: If you are having trouble pressing the bush in, try pressing the bush in at a slight angle so that one part of the lip is already in the bore of the shell, and when steady pressure is applied, the rest of the lip should follow.

4. Apply some of the supplied grease to the bore of the bush and insert the sleeve into the bush.
5. Fit the mild steel washers to either side of the bush before refitting the arm to the car. (See fig 2)
6. Tension all hardware to manufacturers recommended torque settings.



Figure 1

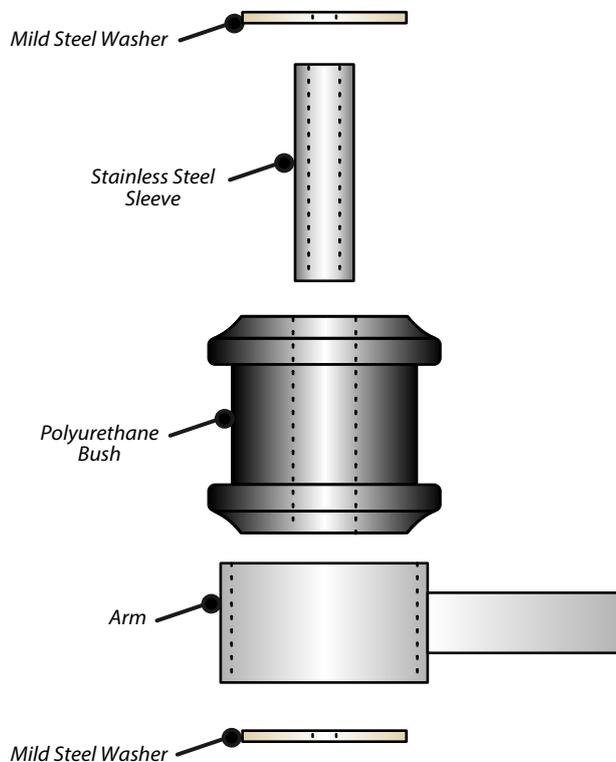


Figure 2