PART NUMBER

PFF76-924

DESCRIPTION

ENGINE MOUNT INSTALLATION GUIDE

Contents (parts per pack):

1 x Polyurethane bush



Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.
It is recommended that:
-all work to be carried out by a licensed technician;
-all safety precautions adhered to;
-wheel alignment to be checked and adjusted as required after any suspension work.
-All fasteners must be tensioned to manufacturer's torque settings.


Fitting Instructions:

1. Safely raise and support the vehicle using suitable axle stands to gain access to the engine mount.

2. Before loosening the engine mount, support the engine and transmission using a suitable engine support beam from above, or a trolley jack fitted with a rubber pad from below. Apply just enough support to prevent the engine and transmission from moving when the mount is released.

3.Remove the mounting bolts securing the original engine mount bracket to the vehicle.

4.Thoroughly clean away any dirt, oil or debris from the voids and surrounding surfaces of the original rubber mount.

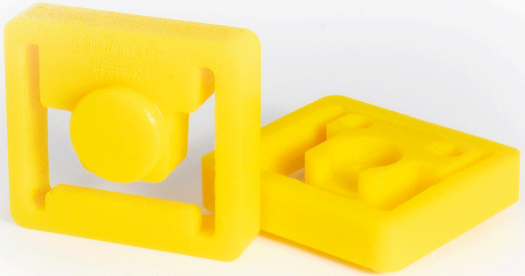

5.Align the polyurethane insert with the corresponding voids in the original rubber mount, as shown in the illustration.

6.Firmly press the polyurethane insert into the voids, ensuring it is fully seated and sits flush against the original rubber mount.

7.Refit the engine mount bracket and all mounting hardware, tightening all fasteners to the manufacturer's recommended torque settings.

