

PART NUMBER

PFF36-103

DESCRIPTION

FRONT UPPER WISHBONE BUSH

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bushes	1 x Grease
4 x Large Plated Washer	4 x Aluminium Sleeves
4 x Small Plated Washer	

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the arm from the vehicle.
2. Press out the original rubber bushes.
3. Thoroughly clean the bore, removing any dirt and corrosion. Remove any sharp edges using a rounded file.
4. Push the polyurethane bush into the bore, ensuring the larger flange faces outward, as shown in Fig. 1.
5. Apply the supplied grease to the bore and the end faces of the bush, then insert the metal sleeve.
6. Fit the small plated washer to the inside of the bush, as shown in Fig. 1.
7. Fit the large plated washer to the outside of the bush.
8. Refit the arm to the vehicle.
9. Tighten all hardware to the manufacturer's recommended torque settings.

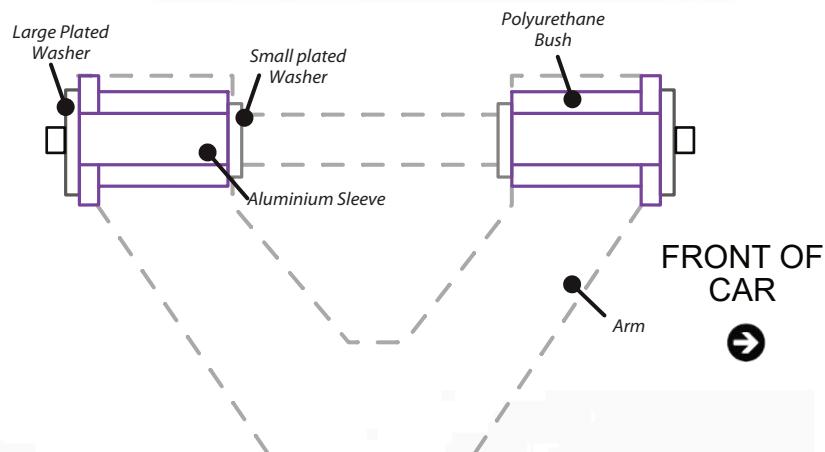


Figure 1 - plan view of the arm showing the correct position of the polyurethane bushes



Figure 2 - exploded isometric view of how the bush will be constructed



sales@powerflex.co.uk



[@powerflexbushes](#)



www.powerflex.co.uk