

POWERFLEX®

PART NUMBER

PFF85-204

DESCRIPTION

FRONT WISHBONE REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane Bushes
- 1 x PTFE/Silicone Grease
- 2 x Stainless Steel Sleeves
- 4 x Stainless Steel Short Sleeves
- 4 x Zinc Plated Mild Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original bush and clean away any dirt and corrosion, remembering to also file away any sharp edges.

2. Apply some washing up liquid to the exterior surface of the Polyurethane Bush and using a vice or press, press the Polyurethane bush into the bore of the arm, until both lips sit flush on the outer surfaces of the arm. Take note of the positioning of the bush in Figure 1, where the smaller lip is inserted first into the bore and the larger lip is facing the top of the car.

3. Insert the Stainless Steel Short Sleeves into the bores for the bolt, and place the Zinc Plated Mild Steel Washers so they sit on the inside of the void, placed on the end of the Stainless Steel Short Sleeves.

4. Insert the Arm Assembly into the Subframe Assembly, as shown in Figure 3. Ensure that the larger lip of the Polyurethane Bush is still facing the direction of the top of the car. Refit the arm and ensure to tension all hardware to manufacturers recommended torque settings.



TOP OF CAR

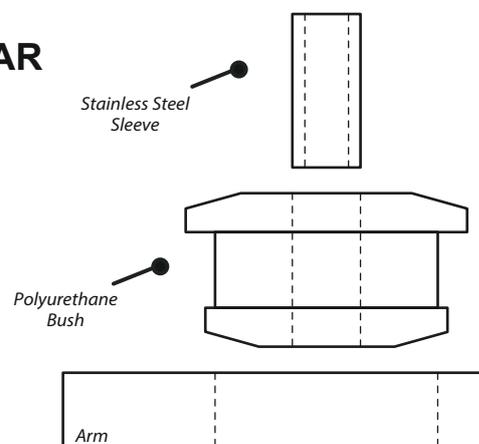


Figure 1 - Arm Assembly

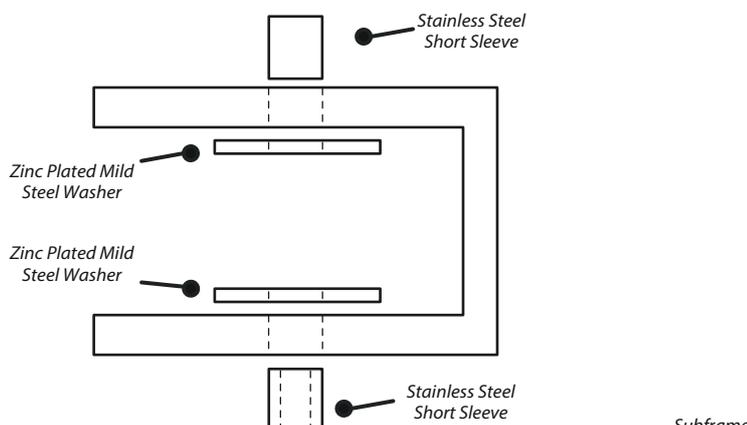


Figure 2 - Subframe Assembly

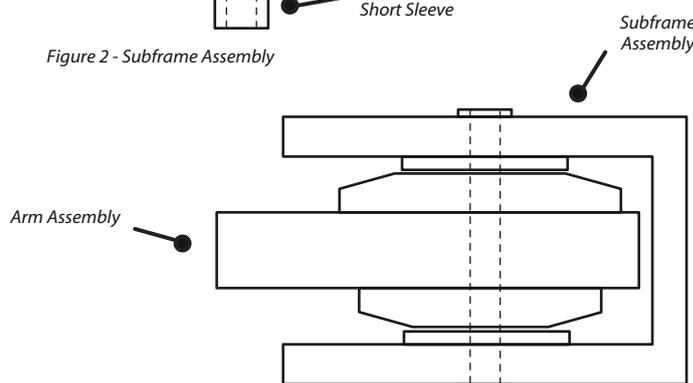


Figure 3 - Final Assembly