



PART NUMBER

PFF85-502G-5

DESCRIPTION

FRONT WISHBONE REAR BUSH ANTI-LIFT & CASTER OFFSET

INSTALLATION GUIDE

Contents (parts per pack):

2 x Aluminium Brackets and Polyurethane Outer Bushes	4 x Caps Head Bolts
2 x Polyurethane Inner Bushes	2 x Spacer Plates
1 x PTFE/Silicone Grease	4 x Flat Washers
	4 x Spring Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:


- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the front wishbones from the vehicle, then remove the original bracket and bush from each wishbone.
2. Clean any dirt and corrosion from the end of each wishbone, removing any sharp edges or burrs with a suitable file.
3. Refit the wishbone to the vehicle, locating the front bush into position first.
4. Apply some of the supplied grease to the bore of the larger outer bush, then insert the black polyurethane inner bush until fully located.
5. Fit the new bracket, ensuring the supplied spacer plate is positioned between the bracket and the vehicle subframe, as shown in **Figure 2**. Ensure the correct bracket orientation for each side of the vehicle, as shown in **Figure 1**.
6. Fit a new replacement stretch bolt (OEM P/N: **N10694701**) in the front hole position. Fit the supplied washers, ensuring the flat washer is positioned between the spring washer and the bracket.
7. Tighten all hardware to the vehicle manufacturer's recommended torque settings.
8. Once installation is complete, test drive the vehicle and carry out a full wheel alignment check, making any necessary adjustments.



Left-hand wishbone fitment shown



Left-hand of car

Right-hand of car

Figure 1

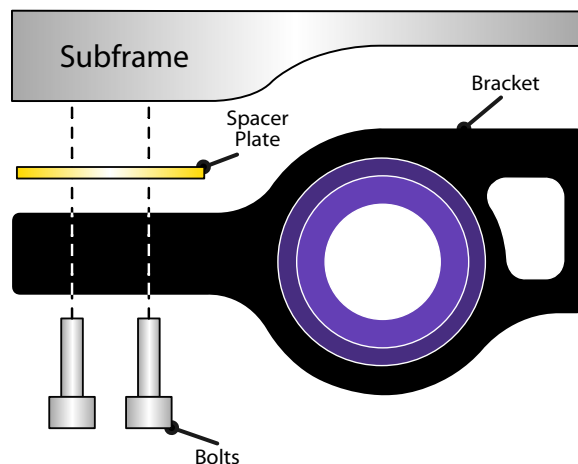


Figure 2