

**PART NUMBER****PFF73-401G****DESCRIPTION****FRONT ARM FRONT BUSH - CAMBER ADJUST****INSTALLATION GUIDE****Contents (parts per pack):**

4 x Polyurethane Bushes 1 x PTFE/Silicone Grease
2 x Stainless Steel Sleeves
1 x 34AF Spanner



Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

**Fitting Instructions:**

1. Remove arm from the car, remove the front bush from the arm, clean any dirt and rust from the hole.
2. Fit the A bush (thicker larger diameter) in from the rear and the B bush (narrow larger diameter) in from the front.
3. Apply some of the supplied grease to the bore of the bush and the face of the B bush. Push the sleeve in from the front, into the B bush first.
4. Turn the sleeve to maximum camber as a starting point. Refit arm to the car.
5. Drive the car to settle the suspension and adjust the geometry to your required setting.

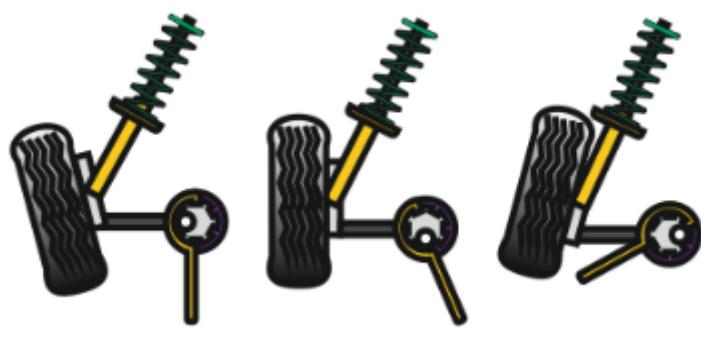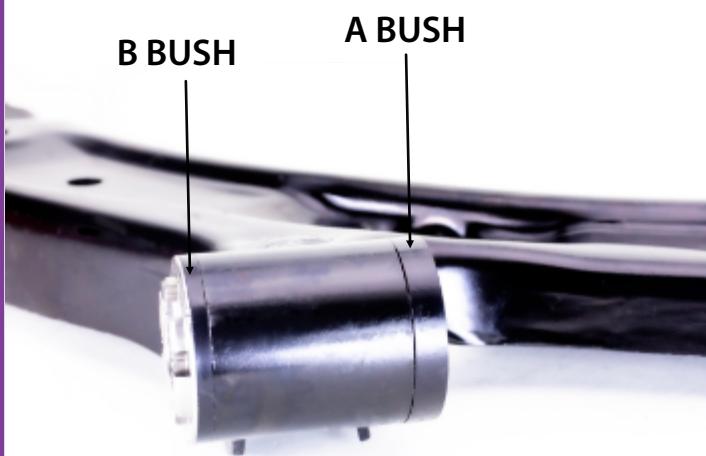

Camber Adjustment Positions