



PART NUMBER
PFF16-540

DESCRIPTION
UPPER ENGINE MOUNT INSERT

INSTALLATION GUIDE

Contents (parts per pack):

1 x Polyurethane Engine Mount Insert

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Support the engine from below with a Jack or Axle stand. It's recommended to use a flat polyurethane jackpad to avoid metal-on-metal contact on the sump. Ensure engine has cooled before beginning work.
2. Using a 10mm socket, loosen and remove the air-box mounting bolt and both coolant bottle mounting bolts.
3. Release the hose clamp holding the intake tube to the air-box, and remove the airbox from engine bay. Pull the coolant bottle from its rubber mounts and lay it towards the front of the car to give access to the engine mount.
4. Using a 17mm socket, loosen the three mount-to-chassis nuts.
5. Using a 15mm socket, loosen the three mount-to-engine nuts and remove the engine mount.
6. The top half of the mount is secured to the bottom half by swaged bolt holes. These need to be drilled away with a chamfer bit or 15mm drill to separate the two halves. (Figures 1 and 2)
7. Once separated, fit the insert into the mount, with the base facing towards the engine, and with the pins sitting around the mount as in Figure 3. The insert will need to be stretched over the solid metal bracket of the mount.
8. Ensure the top half of the mount is clean and free from any sharp edges, and push the two halves back together.
9. Refit the mount to the car, You must tighten all engine mount bolts to the manufacturer's specified torque settings.
10. Refit the air-box, intake tube and coolant bottle, and gently lower the support from the engine.



Figure 1: Swaged bolt holes to be drilled



Figure 2: Separate two halves



Figure 3: Fit insert into mount



Figure 4: Refit top half of mount

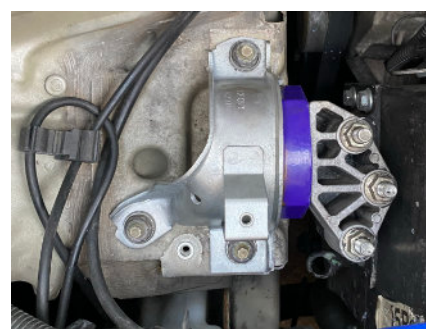


Figure 5: Refit to car